



Roll Over Bar Assembly  
 900-01-1111  
 MONOCOQUE (CON, T).

900A  
 Roll Over Bar Assembly

	Description	Qty	Part Number	
25	NUT UPPER LINKAGE MTC	6	900-01-35	*
26	TIE ROD ENDER FRONT	1	900-01-37	*
27	TIE ROD ENDER FRONT	1	900-01-38	*
28	ROLL OVER BAR	1	900-01-40	*
29	ROLL OVER BAR CUP BUSH	2	900-01-41	*
30	ROLL OVER BAR STOP	2	900-01-44	*
31	ROLL OVER BAR ASSEMBLY	1		T
32	SPREADER BUSH UNDERING	12	900-01-45	*
33	WASHER TOP ENG MTC	2	900-01-48	
34	SKID BLOCK FLANGE	2	900-01-49	
35	SHIELD PLATE SIDE BELT ANCHOR	2	900-01-54	
36	SPREADER BUSH FRONT EXT	2	900-01-55	
37	TOP ENGINE MTC PLATE FULL RH	1	900-01-58	
38	TOP ENG MTC PLATE FULL LH	1	900-01-59	
39	WASHER TOP ENG MTC FULL	2	900-01-61	
40	SHIELD PLATE MTC	2	900-01-67	
41	FLNG MTC	2	900-01-67	
42	FOOT PEDAL MTC DKT	2	900-01-68	
43	CLUTCH FOOT PLET	1	900-01-69	
44	PLATE STAT BELT MTC	1	900-01-64	
45	CLUTCH REACTION MTC	1	900-01-71	
46	BRK DM CONTROL MTC	1	900-01-73	
47	COLLAR BRK DM CONTROL	1	900-01-74	
48	STEERING BACK FITTING RHD ONLY	1	900-01-77	

Aircraft Component Ltd  
 900 Mill Lane  
 Monocouque (CON, T).

900A

\* - Part of next assembly.

	Description	Qty	Part Number
49	NOSE CONE LWR PATCH	1	900-01-29
50	NOSE CONE MTR PLATE	1	900-01-30
51	NOSE CONE MTR PL EXTE	2	900-01-31
72	TOP SEAT BELT BAR	2	900-01-32
52	TOP SEAT BELT MTR BKT	2	900-01-34
54	LWR SEAT BELT MTR	2	900-01-35
55	DUSH MACHINE MTR	8	900-01-37
56	SPACERS	2	900-01-99-001
57	SPACERS	2	900-01-99-002
58	DUSH LWR END MTR REF 01 25	2	900-01-91
59	N/D TOP HATS	4	900-01-92
60	FIN NOSE BOX COVER	2	900-01-93
61	NOSE SKIN OUTER	1	900-01-94
62	NOSE SKIN TRAY	1	900-01-95
63	TOP END MTR PLATE LP	1	900-01-96
64	TOP END MTR PLATE RN	1	900-01-97
65	RETAINER THP FINAL	1	900-01-99
66	JOINT FINN NOSE BOX	1	900-01-100
67	NOSE BOX COVER	1	900-01-101
68	BRAKE STOP	1	900-01-102

REAR AXLE ASSEMBLY  
 FRONT SUSPENSION

QCSA

Part of front assembly.

	Description	No.	Part Number
1	ROCKER SUPPORT BRKT	2	900-02-03
2	FRONT ROCKER LEVER HUB	2	900-02-11
3	FRONT ROCKER LEVER HUB	2	900-02-12
4	FRONT ROCKER SUPPORT BRKT	2	900-02-04
5	STEER SUPPORT FOOT	2	900-02-05 001
6	STEER SUPPORT FOOT	4	900-02-05 002
7	BUSH HUB/ROCK ROCKER UPPER	2	900-02-07
8	ROCKER PIN	2	900-02-08
9	BAR PINNED LIMITED	2	900-02-09
10	TOP HAT BUSH DAMPER	4	900-02-10
11	TOP HAT BUSH BUSH 500	4	900-02-11
12	TOP HAT BUSH BARB	4	900-02-12
13	HTC BRK FTWD LH/RH	4	900-02-14
14	FRONT PUSHER LH	1	900-02-15
15	FRONT PUSHER RH	1	900-02-16
16	2/4" TUBE FRONT PUSH ROD	2	900-02-17
17	JOINT HGS FRONT P'ROD RH	1	900-02-18
18	JOINT HGS FRONT P'ROD LH	1	900-02-19
19	ADJ END FRONT P'ROD	2	900-02-20
20	BARREL NUT ADJ T P'ROD	2	900-02-21
21	JAN NUT 11/16 20 UN	2	900-02-22
22	ADJ END ADJ T P'ROD	2	900-02-23
23	WROOP LIMITED BRKT	2	900-02-24
24	BOYEL	2	900-02-25

NEW 411 ENGINEERING LTD  
 900 ICE LIAISON  
 FRONT SUSPENSION (CON, T).

900A

Part of Item Assembly:

	Description	Qty	Part Number	
35	THRUSTERS INSERT	2	900-02-20	
36	FLWD RR LH	1	900-02-101	
37	FLWD RR RH	1	900-02-102	
38	FEZ/TINE HOLDING 11 AND 07	2	900-02-103	*
39	OUTER END FLWD RR RH	1	900-02-104	*
40	OUTER END FLWD RR LH	2	900-02-105	*
41	JOINT HO OUTER END FLWD	2	900-02-106	*
42	R/S CLEVIC FLWD LH RR	1	900-02-107	*
43	RR CLEVIC FLWD RH RR	1	900-02-108	*
44	0.010" CAMBER SHIM (YELLOW)	1	900-02-109	*
45	0.100" CAMBER SHIM (GOLD)	1	900-02-110	
46	0.104" CAMBER SHIM (BLACK)	1	900-02-111	
47	0.075" CAMBER SHIM (CLEAR)	1	900-02-112	
48	0.020" CAMBER SHIM (BLUE)	1	900-02-113	
49	FRONT UPPER WB RR	2	900-02-114	
40	KONT BANDER 0012 1002 BA EB	2	16 20 10	
41	END 100 FLWD	4	900-02-115	
42	OUTER END FLWD	2	900-02-116	
43	ROCKER PIN BUSH	2	900-02-117	
44	SPACER FLWD FL SHORT	2	900-02-200	
45	SPACER FLWD FL	2	900-02-201	
46	SPACER FLWD RL	2	900-02-202	
47	SPACER FLWD AL SHORT	2	900-02-203	
48	SPACER FLWD AL	2	900-02-204	

Front Air Conditioning Limited  
 FRONT AIR CONDITIONING  
 FRONT SUSPENSION(CON, T).

900A

Part of front assembly.

	Description	No.	Part Number
49	DAMPER TOP	2	900-02-09
50	SPACER FR CLEVIS	4	900-02-206
51	SPACER FR CLEVIS	4	900-02-206
52	FLNG RL COLLARE	4	900-02-205
53	0.100" DAMPER SPACER (CLEAN)	1	900-02-05
54	0.000" DAMPER SPACER (RED)	1	900-02-07
55	0.000" DAMPER SPACER (BLUE)	2	900-02-08
56	0.797" DAMPER SPACER (CLEAN)	1	900-02-02
57	COVER FLNG RL	2	900-02-01
58	SPACER FLNG	4	900-02-01
59	SPACER FLNG	2	900-02-02
60	COVER FTFL	2	900-02-02
61	COVER FTFL	2	900-02-03
62	COVER FLFL	2	900-02-04
63	INSERT FLFL COVER	2	900-02-05
64	DOWN DAMPER TX SHY	1	900-02-200
65	DOWN FRONT DAMPER	2	900-02-200
66	SPACER FLNG	4	900-02-01
67	SPACER FLNG	2	900-02-02
68	SPACER FLNG	2	900-02-03
69	SPACER	2	900-02-04
70	SPACER FLNG	2	900-02-05
71	ROCKER BODY TOP MAT WADNER	2	900-02-06
72	DAMPER TOP PATRIOT	2	900-02-07

FRONT SUSPENSION (CON, T)  
 FRONT SUSPENSION (CON, T)

SOCA

Part of next assembly.

	Description	No.	Part Number
73	CUTTER END FF P/R MK11	2	900-02-09
74	FTWD SW LH	1	900-02-09
75	FTWD SW RH	1	900-02-10
76	BRS NBS AXT CR P/R	2	900-02-11
77	FTWD OUT SW LH	1	900-02-12
78	FF WITH COY MK11	2	900-02-13
79	LEWD SW LH	1	900-02-100
80	LEWD SW RH	1	900-02-110
81	CUTTER END FLWD SW LH	1	900-02-111
82	CUTTER END FLWD SW RH	1	900-02-112
83	PUSH ROD CLEVIS FLWD SW LH	1	900-02-112
84	PUSHED CLEVIS FLWD SW RH	1	900-02-114
85	FLWD MEDIUM TRACK LH	1	900-02-115
86	FLWD MEDIUM TRACK RS	1	900-02-116
87	FTWD MED TRACK	2	900-02-10
88	FTWD FRONTX MED TRACK LH	1	900-02-10
89	FRONT PUSH ROD SHORT LH	1	900-02-17
90	FRONT PUSH ROD SHORT RH	1	900-02-18
91	FTWD MED TRACK	1	900-02-10
92	FRONT FRONTX MED TRACK LH	1	900-02-10
93	FLWD MEDIUM TRACK LH	1	900-02-115
94	FLWD MEDIUM TRACK RH	1	900-02-116
95	P/R CLEVIS MED TRACK	2	900-02-117

Part of the Engineering Drawing File of  
 GROUP - VEHICLE LIAISON  
 REAR SUSPENSION.

0000

\* - Part of truck assembly.

	Description	No.	Part Number
1	TRACK ROD	2	000-03-01
2	BUSH TRACK ROD RH	2	000-03-02
3	BUSH TRACK ROD LH	2	000-03-03
4	REAR LWR DRKT	2	000-03-04
5	FRONT LWR WD DRKT	2	000-03-05
6	LWR WD JOINT INSERT	1	000-03-06
7	JOINT BUSH RLWD	2	000-03-082
8	UPPER REAR WHEELSONE	2	000-03-101
9	ROCKER JOINT HOUSING	1	000-03-07
10	ROCKER BEARING TUBE	2	000-03-08
11	ROCKROD INNER JOINT INSERT	4	000-03-09
12	ROCKER RH	2	000-03-10
13	ROCKER INNER BUSH	2	000-03-11
14	SPRING PLATFORM	2	000-03-01
15	SPRNG DAMPER 2012 1602 BASE MOD	2	000-17-03
16	BUSH ARE LINK	2	000-02-12
17	TOP EYE DAMPER	2	000-03-13
18	INSERT DAMPER TOP	4	000-03-20
19	INSERT FR LOWER	4	000-03-21
20	ROCKTR LH	2	000-03-14
21	BLWD RH	1	000-03-14
22	BLWD LH	1	000-03-15
23	HOUSING FR BLWD	2	000-03-16
24	HOUSING REAR BLWD	2	000-03-17

Plant: Elyria  
 1000 1011 1156  
 REAR SUSPENSION (CON, T)

0000

Part of new assembly.

Quantity	Description	Qty	Part Number
00	BEARING OUTER SH HD	2	900-03-10
00	FIXED ROD END TIE ROD	2	900-03-101
07	LOCK NUT 7/8 UNC	2	900-03-102
00	LOCK NUT 7/8 UNF	1	900-03-103
00	INSERT TIE ROD	2	900-03-104
00	BARREL NUT TIE ROD REAR	2	900-03-105
01	REAR SHOCK ROD	2	900-03-106
00	BRK TRNSD RH	1	900-03-107
00	BRK TRNSD LH	1	900-03-108
01	INSERT TRNSD BRK	2	900-03-109
00	INSERT TRNSD LUP	2	900-03-110
00	INSERT TRNSD UPR	2	900-03-111
07	COIL PLATE	4	900-03-112
00	COIL RWD FRONT	4	900-03-113
00	DAMPER LOWER SHOCK MOUNTING	4	900-03-114
10	DAMPER LOWER SHOCK SHOCK	4	900-03-115
11	LOWER DAMPER RING	2	900-03-116
00	ROCKER PLATE FR LH	1	900-03-117
10	ROCKER PLATE FR RH	1	900-03-118
11	ROCKER PLATE REAR LH	1	900-03-119
10	ROCKER PLATE REAR RH	1	900-03-120
10	ROCKER SHAFT	2	900-03-121
17	DAMPER ADJ CLIP 10	2	900-03-122
10	INSERT TRNSD SHOCK	4	900-03-123



REAR SUSPENSION (CON, Y)  
PARTS LIST  
REAR SUSPENSION (CON, Y).

0001

Part of main assembly.

Description	Qty	Part Number
70 FRONT WHEEL AND SWAY	1	000 00 010

FIG. 1. ENGINEERING DRAWING  
 9000 1115 LK 001  
 STEERING.

900A

Part of rear assembly.

	Description	No.	Part Number	
1	RAIL A. FRONT ENDING	1	900-04-11	
2	BACK	1	900-04-08	*
3	CLEVIS	2	900-04-04	
4	STEERING RACK CLEVIS LOCK NUT	2	900-04-02	
5	7 TOOTH 14 DP STEERING PINION	1	9-45 0	
6	8 TOOTH 14 DP STEERING PINION	1	9-45 17	
7	9 TOOTH 14 DP STEERING PINION	1	9-45 0	
8	BACK TENSION GAF	1	900-04-10	
9	BACK SPRING RETAINER	1	710-04-08	
10	BACK TENSION SPRING STOP	1	710-04-09	
11	STEERING RACK ASSEMBLY	1		T
12	STUD	2	900-11-08	
13	COUPLING	1	900-04-06	
14	COLUMN MOUNTING	1	900-04-07	
15	COLUMN MOUNTING OFFSET	1	900-04-15	
16	HOUSING CASTING	1	900-04-05	
17	MOUNTING BLOCKS	2	900-04-12	
18	SPHERICAL BEARING	1	900-04-14	
19	QUICK RELEASE SPLINED END	1	900-04-13	
20	QUICK RELEASE SPRING	1	10-10 2	
21	QUICK RELEASE COLLAR	1	910-04-14	
22	BALL BEARING 1/4" STEEL	6	9-25 12	
23	STEERING WHEEL NUT	1	900-04-03	
24	TRACK FOR RR & STD SW	2	900-04-16	

THE IRONWORKS COMPANY LIMITED  
 1000 MILLERS LANE  
 STERLING (CON, T)

9000

Part of next assembly.

	Description	Qty.	Part Number
35	STEERING ARM END BR	2	900-04-17
36	PINION NUT	1	900-04-20
37	CLASTER END LINKS	2	900-04-21
38	SPACER STD BRK	4	900-04-22
39	SPACER	4	900-04-23
40	TRACK ROD BUSH RH THREAD	2	900-04-24
41	TRACK ROD BUSH LH THREAD	2	900-04-27
42	STAYS	2	900-04-25
43	SUPPORT STD COLN	2	900-04-26
44	CLEVIS STR COL SHFT	2	900-04-27
45	BRG STD COL SHFT	1	900-04-28
46	SUPPORT STD COL	2	900-04-29
47	SPACER	2	900-04-30
48	STR COL COUNTERLINE MK11	1	900-04-31
49	LH TRACK ROD SHT END	1	900-04-32
40	TRACK ROD FRONT 5/16 DIA	2	900-04-33
41	TRACK ROD END 5/16 DIA RH	2	900-04-35
42	TRACK ROD SHT END 5/16 DIA LH	2	900-04-37

ANTY ROLL BAR  
 ANTY ROLL BAR

BOGA

ANTY ROLL BAR

No.	Description	Qty.	Part Number
1	FRONT ANTY ROLL BAR 2"	1	900-00-01
2	FRONT ANTY ROLL BAR 1"	1	900-00-02
3	FRONT ANTY ROLL BAR 1.25"	1	900-00-03
4	FRONT ANTY ROLL BAR 1.5"	1	900-00-04
5	FRONT ANTY ROLL BAR	1	900-00-05
6	REAR ROLL BAR CON. CABLE	1	900-00-06
7	DRS. HRS. FARE	2	900-00-07
8	DRS. HRS. FARE	1	900-00-08
9	VARIABLE SLIDE FARE	2	900-00-09
10	LEVER PLATE FARE	1	900-00-10
11	HOUSING FARE	1	900-00-11
12	HOUSING CAP FARE	1	900-00-12
13	BUSH BOLT FARE	2	900-00-13
14	BUSH BOLT FARE	1	900-00-14
15	BUSH FARE	1	900-00-15
16	ROLLBAR END FARE	1	900-00-16
17	FARE END CAP	2	900-00-17
18	FARE BRACKET	2	900-00-18
19	FARE TUBE 1.25 TO 1.5 TUBE	1	900-00-19
20	FARE TUBE 1.25	2	900-00-20
21	FARE TUBE 1.50	1	900-00-21
22	FARE TUBE	1	900-00-22
23	FARE TUBE	2	900-00-23
24	CONTROL CABLE	1	900-00-24

Roller Mill Engineering Ltd  
 PO BOX 1014 LILIAN  
 ANTI ROLL BAR (CON, T).

000A

Part of next assembly.

Quantity	Desc	Qty	Part Number
25	FARD BRG HOE (FLD)	2	900-05-07
26	FARD CONTROL COL NTC	1	900-05-08
27	INDEX QUADRANT ARD	1	900-05-09
28	LEVER ARM ARD	2	900-05-09
29	ARD BRAGER	4	900-05-01
30	FARD WASH	2	900-05-03
31	ARS FLANGE BUSH	2	900-05-07
32	FARD CONISTONE ROD	2	900-05-01
33	FARD BRG PLNK	2	900-05-05
34	HOE ADJ FLARE BARD	1	900-05-101
35	FLANCON BOLT BARD	2	900-05-102
36	BRANK REV W. BARD	1	900-05-102
37	END FITTING BARD	1	900-05-104
38	HOE PINED BL BARD	1	900-05-105
39	WAVE	1	900-05-106
40	BARD 1 1/2 TUBE	1	900-05-107
41	BARD 1 1/4 TUBE	1	900-05-108
42	CABLE BRK 1 1/2 BARD	1	900-05-109
43	CABLE BRKT BARD 1 1/4	1	900-05-110
44	BUSH BARD CABLE BRKT	1	900-05-111
45	CABLE BRKT 1 1/4	1	900-05-112
46	CABLE BRKT 1 1/2	1	900-05-113
47	BLADE BARD	1	900-05-114
48	BLADE BARD	1	900-05-114

WILSON STEEL ERECTION, INC. A.S.P.  
 10000 132nd Street, L.L. #270  
 ANTI ROLL BARCOON, T1.

Q00A

Roll-off unit assembly.

	Part Name	Qty.	Part Number
10	CRANK END FARE	2	900-05-115
11	SUPPORT INT BARD RM	1	900-05-116
12	SUPPORT INT BARD LM	1	900-05-117
13	END LINK BARD	2	900-05-120
14	CLEVIS END LINK BARD	2	900-05-121
15	WASHER TX BLADE BARD	1	900-05-124
16	CABLE SUPPORT	1	900-05-125
17	ARC LEVER LHM 30	1	900-05-130
18	FARE SUAD BUSH	1	900-05-137
19	STUD FARE SUAD	1	900-05-138
20	QUADRANT FARE	1	900-05-139
21	SPACED SUAD FARE	1	900-05-140
22	CONTROL LEVER MTC	1	900-05-141
23	CABLE CLIPP	1	900-05-126
24	FXD BLADE BARD TI	1	900-05-127
25	ADJ BLADE BARD TI	1	900-05-128
26	1" TUB	1	900-05-129
27	1/4" TUB	1	900-05-130
28	CABLE BOK 1"	1	900-05-131
29	CABLE BOK 1/4"	1	900-05-132
30	PRO HOE BARD	2	900-05-133
31	ORT EXT CLEVIS LM	1	900-05-134
32	ORNT EXT BARD RM	1	900-05-135
33	ADJ BLADE BOK 12 TX 10	6	0-00-1

RECEIVED  
ANTI ROLL BAR ROD, 13.

0001

Part of main assembly.

	Description	Qty	Part Number
70	ANTI ROLL BAR ROD	1	0001

ANTI ROLL BAR.  
 ANTI ROLL BAR.

900A

Part of crank assembly.

	Description	No.	Part Number
1	PART 1.25 100WS	1	900-05-19-001
2	PART 1.25 10 0WS	1	900-05-19-002
3	PART 1.50 100WS	1	900-05-19-003
4	PART 1.50 100WS	1	900-05-19-004
5	PART 2.00 00WS	1	900-05-22-001
6	PART 1.75 00WS	1	900-05-22-002
7	PART 1.75 100WS	1	900-05-22-003
8	PART 1.50 100WS	1	900-05-106-001
9	PART 1.50 150WS	1	900-05-106-002
10	PART 1.50 100WS	1	900-05-106-002
11	PART 1.25 100WS	1	900-05-100-004

Plant to be dismantled and lifted  
 from the site and  
 FRONT UPRIGHT.

900A

Front Part of front assembly.

	Description	No.	Part Number	
1	SH D BEARING FRONT AXLE	1	90P-08-14	
2	LN D BEARING FRONT AXLE	1	90P-08-15	
3	FRONT UPRIGHT LM	1	900-00-13	
4	FRONT UPRIGHT RM	1	900-00-14	
5	LOGSHT LM FRONT AXLE 10 10 0	1	900-00-11	*
6	LOGSHT RM FRONT AXLE	1	900-00-12	*
7	BALLJOINT MOUNTING END	2	90P-00-15	*
8	UPRIGHT TOP BODD	2	90P-00-19	*
9	SHLETER MOUNTING BODD	1	90P-00-21	*
10	AXE DYN SPINNING	1	90P-00-22	*
11	BRAKE DUST MOUNT RM	1	90P-00-26	*
12	HTC PLATE FRONT UPRIGHT	2	900-00-17	*
13	BRAKE DUST MOUNT LM	1	90P-00-25	
14	HTC PLATE FRONT UPRIGHT	1	900-00-16	*
15	CENTRE ADDY FRD UPRIGHT	1	900-00-05	*
16	CENTRE FRONT UPRIGHT 2ND OPD	2	900-00-09	*
17	CENTRE ADD FRONT UPRIGHT	2	900-00-06	*
18	SHOUL LOWER FRONT UPD	2	900-00-08	*
19	SERIAL NUMBER TAG SHORT	1	90P-00-20	*
20	FRONT UPRIGHT ASSEMBLY	2		T
21	STEEL SEAL RING IN FR AXLE	2	900-00-07	
22	BEARING SPACER FRONT OUTER	2	900-00-10	
23	BEARING SPACER OBRG	2	900-00-11	
24	BEARING SPACER FRONT INNER	2	900-00-12	

Plant: 44 Engineering: 100  
 0000 1015 List  
 FRONT UPRIGHT (CON, T).

000A

Part of next assembly:

	Description	Qty	Part Number
22	SEALING SPACER FRONT STEEL	2	000-06-10
25	SEALING SPACER RT T.D.	2	000-06-14
27	GEAR RING OUTER	2	000-06-17
28	WHEEL BRG TWIN HD 240 FRONT	1	0-51-9
29	WHEEL BRG TWIN HD 240 BRK	1	0-51-9
36	WHEEL BEARING STEEL	4	000-06-10
38	AXLE NUT LOCK RING (SLOTTED)	2	20-7-11
39	BARREL NUT	1	000-06-00
39	AXLE EXTENSION	2	000-06-00
41	AXLE DRIVE PEG	2	000-06-11
35	3/8" DIA CALIPER MOUNTING STUD	1	000-06-00
37	1/4" DIA CALIPER MOUNTING STUD	2	000-06-07
37	LH WHEEL NUT TI	1	000-06-00
38	RH WHEEL NUT TI	1	000-06-01
39	SHIMS CALIPER BRIDGE ALCON	4	000-20-00
40	CENTER BRIDGE ALCON	2	000-20-07
41	LH ALLOY WHEEL NUT	1	000-06-00
42	RH ALLOY WHEEL NUT	1	000-06-00

REAR AXLE ASSEMBLY  
 REAR UPRIGHT.

900A

Part of next assembly.

1	Description	Qty	Part Number	
	CV CARTER WHEEL OUTBOARD	2	000-07-01	
	BEARING SPACER REAR UPRIGHT	2	000-07-02	x
	REAR AXLE TINKER BRG RH	2	000-07-03	x
	REAR AXLE TINKER BEARING LH	2	000-07-04	x
	CENTRE BEARING MOUNTING 10" OP	2	000-07-07	x
	CENTRE BRG USE ONE OF RH	1	000-07-08	x
	CENTRE BRG USE ONE OF LH	2	000-07-09	x
	REAR UPRIGHT LH	1	000-07-05	
	REAR UPRIGHT RH	1	000-07-06	
	RING REAR UPRIGHT	2	000-07-10	x
	LOWER PLATE	1	000-07-11	x
	LOWER PLATE	1	000-07-12	x
	LOWER BOSS	2	000-07-13	x
	BOSS BALL TIEE HVC	1	000-07-14	x
	OUTER DRUM	2	000-07-15	x
	INNER DRUM	2	000-07-16	x
	DRUM WASHY LH	1	000-07-17	x
	DRUM WASHY RH	2	000-07-18	x
	TOP HAT BUSH	4	000-07-20	x
	AIR DEFLECTOR	2	000-07-19	x
	THREADED BUSH BRAKE DUCT MTR	4	000-07-21	x
	LH REAR AXLE CV JOINT LOCKNUT	1	000-07-07	
	RH REAR AXLE CV JOINT LOCKNUT	1	000-07-08	
	AXLE EXTENSION	2	000-00-00	



11. The following are the parts of a clutch pedal assembly.  
 1. THROTTLE PEDAL ADD  
 2. THROTTLE LEVER  
 3. FOOT PAD THROTTLE  
 4. TOE STRAP THROTTLE  
 5. BRAKER  
 6. BRAKE PEDAL ADD  
 7. BRAKE PEDAL FOOTPAD  
 8. BRAKE PEDAL  
 9. BRAKE PEDAL FOOTPAD  
 10. BRAKE BALANCE BAR  
 11. BUSH NUT BAL BAR TIEV  
 12. BUSH BALANCE BAR  
 13. BUSH ROD EXT BRAKE  
 14. BUSH ROD EXT MALE  
 15. END FITT BUSH B INT FEMALE  
 16. LEVER CLUTCH PEDAL  
 17. BUSH CLUTCH PDL  
 18. CABLE ATTCH CLUTCH  
 19. FLANGES BUSH CLUTCH  
 20. FOOT PAD CLUTCH  
 21. THROTTLE/CLUTCH STOP ADD  
 22. THRO/CLUT STOP  
 23. THRO/CL STOP HOUSING  
 24. BRKT THRO/CL STOP

Q.8

1. Name the parts of a clutch assembly.

Description	No.	Part Number
1 THROTTLE PEDAL ADD	1	000-00-01
2 THROTTLE LEVER	1	000-00-02
3 FOOT PAD THROTTLE	1	000-00-03
4 TOE STRAP THROTTLE	1	000-00-04
5 BRAKER	2	000-00-05
6 BRAKE PEDAL ADD	1	000-00-06
7 BRAKE PEDAL FOOTPAD	1	000-00-07
8 BRAKE PEDAL	0	000-00-08
9 BRAKE PEDAL FOOTPAD	1	000-00-09
10 BRAKE BALANCE BAR	1	000-00-10
11 BUSH NUT BAL BAR TIEV	2	000-00-11
12 BUSH BALANCE BAR	0	000-00-12
13 BUSH ROD EXT BRAKE	2	000-00-13
14 BUSH ROD EXT MALE	2	000-00-14
15 END FITT BUSH B INT FEMALE	2	000-00-15
16 LEVER CLUTCH PEDAL	1	000-00-16
17 BUSH CLUTCH PDL	1	000-00-17
18 CABLE ATTCH CLUTCH	1	000-00-18
19 FLANGES BUSH CLUTCH	2	000-00-19
20 FOOT PAD CLUTCH	1	000-00-20
21 THROTTLE/CLUTCH STOP ADD	1	000-00-21
22 THRO/CLUT STOP	1	000-00-22
23 THRO/CL STOP HOUSING	1	000-00-23
24 BRKT THRO/CL STOP	1	000-00-24

Part of the Engine assembly kit of  
 6000 1000 1000  
 PEDALO (CON, T).

000A

Part of next assembly.

	Description	Qty.	Part Number
05	VERTICAL PLATE THRT STOP	1	000-00-05
06	BEARING	1	000-00-06
07	CABLE BRAKE BALANCE	1	000-00-07
08	THROTTLE CABLE /TT	1	000-00-08
09	CABLE BRAKE BAL.	1	000-00-09
00	CLUTCH CABLE EXT	1	000-00-07
01	THROT CABLE EXT	1	000-00-00
02	THROTTLE PEDAL TOE STR HULL	1	000-00-00
03	BRAKE PEDAL	1	000-00-00
04	FOOT PAD CLUTCH PED OFFSET	1	000-00-01
05	THROT/CLUTCH STOP HULL	2	000-00-02
06	STOP HCG	2	000-00-00
07	BRKT THROTTLET STOP HULL	2	000-00-04
08	THRT SPRING RET ASSL	1	000-00-07
09	SEATING BRK THROT RET	1	000-00-03
10	OUTER SLEEVE THRT RET	1	000-00-07
11	INNER SLEEVE THROT RET	1	000-00-00
12	CONEICAL SEAT THROT RET	1	000-00-00
13	COLLET THROT RET	1	000-00-10
14	THRT STOP THROT ADJUST	1	000-00-11
15	END LH TREAD	1	000-00-12
16	END RH TREAD	1	000-00-12

Part No. 00000000000000000000  
 0000 0000 0000 0000  
 WHEELS

0000

Part of wheel assembly

	Description	Qty.	Part Number
1	FRONT WHEEL	2	000 00 01
2	FRONT WHEEL WITH OUTER COVER	2	000 00 02
3	REAR WHEEL WIDE TRACK	2	000 00 03
4	REAR WHEEL NARROW TRACK	2	000 00 04
5	REAR WHEEL N/T 3 OUTER COVER	2	000 00 05
6	REAR WHEEL N/T 6 OUTER COVER	2	000 00 06
7	WHEEL NUT LOCKING PIN	4	000 00 07
8	OUTER LOCKING PIN WAGNER	4	000 00 08
9	WHEEL NUT LOCKING PIN SPRING	4	000 00 09
10	LOCKING PIN DETAINING SCREW	4	000 00 10

Part of new assembly  
 DRIVE CHART

0000

Part of new assembly

No.	Part Number	No.	Part Number
1	DRIVE SHAFT END OF SHAFT	1	000-10-01
2	DRIVE SHAFT END OF SHAFT	2	000-10-02
3	DRIVE SHAFT END	3	000-10-03
4	CV JOINT INNER TRACK	4	000-10-04
5	CV JOINT OUTER TRACK	5	000-10-05
6	CV JOINT BALL	6	000-07-06
7	STEEL BALL CV JOINT BALL	24	070-10-07
8	DRIVE SHAFT TRACK	8	000-10-08
9	CV JOINT GASTER	2	11-4-10
10	DRIVE SHAFT GASTER	2	0-47-0
11	CV JOINT INNER TRACK	11	000-10-09

Plant: Birmingham King Ltd  
 0000 11 1 1 1 1  
 SEARCHED.

000A

See Part of next assembly.

	Description	Qty	Part Number
1	G/O TIRE FRONT MAINCASE	1	900-11-01
2	G/O ROD END FINAL ROD	2	900-11-02
3	G/O ROD END FINAL ROD	1	900-11-03
4	G/O OUTPOST BRKT	1	900-11-05
5	GLIDE COUPLING	1	900-11-05
6	SPLEEN INT G/O	1	900-11-07
7	FLY COUPLING MOD	1	900-11-08
8	G/O INTERMEDIATE	1	900-11-09
9	GADDE INT	1	900-11-10
10	GEAR LEVER HUB	1	900-11-11
11	KEY GEAR LEVER HUB	1	900-11-12
12	OUTPOST BRKT	1	900-11-13
13	GEAR HUB	1	900-11-14
14	GEAR LEVER	1	900-11-15
15	SPAWER GEAR LEVER	1	900-11-17
16	G/O THREAD GEAR LEVER	1	900-11-18
17	REACTION PAD	1	900-11-19
18	WASHER	1	900-11-20
19	JOINT PIECE BR/L	1	900-11-23
20	ROD END PNA ROD BR/CH	1	900-11-24
21	SPLEEN GEAR ROD JOINT (S/B)	1	078-11-17
22	GEAR ROD JOINT SPLINED HELD ON	1	900-11-02
23	END OF AN OUTPOST S/L	1	900-11-25
24	GADDE PLANT BR/CH SUPT	1	900-11-26

Part of the following assembly: 11111111  
 11111111  
 11111111  
 11111111

111111

Part of next assembly:

	Description	Qty	Part Number
28	GEAR LEVER SPR. SHUNT	1	900-11-27
29	GEAR LEV. BEAR. BUSH	1	900-11-28
30	GEAR BUSH	1	900-11-29
31	GEAR LEVER HUB W/KEY	1	900-11-30
32	GEAR LEVER ADJ.	1	900-11-31
33	GEAR LEVER REACT BAR ADJ.	1	900-11-32
34	REACT BAR BARR. NUT	1	900-11-33
35	GEAR SHIFT 1ST ROD ADJ.	1	900-11-34
36	BARR. NUT GEARSHIFT 1ST SHAFT	1	900-11-35

REAR WING  
 REAR WING  
 REAR WING

000A

Part of main assembly.

	Quantity	No.	Part Number	
1	ENGINE COVER	1	000-12-07	
2	UNDER WING	1	000-12-08	
3	RU AIRCRAFT REAR WING END PLATE	1	000-12-010	R
4	LU AIRCRAFT REAR WING END PLATE	1	000-12-011	L
5	AIRCRAFT R. FLAP HINGE PLATE LU	1	000-12-020	R
6	LU RR REAR WING MOUNTING PLATE	1	000-12-01	R
7	RU RR REAR WING MOUNTING PLATE	1	000-12-02	R
8	WING MOUNTING STUD	4	000-12-140	R
9	WING MOUNTING THINER WASHER	5	000-12-145	R
10	REAR WING BELLAD CRANK TUBE	4	000-12-14	R
11	AIRCRAFT REAR WING MAINPLANE	1	000-12-001	R
12	AIRCRAFT REAR WING FLAP 1	1	000-12-002	R
13	AIRCRAFT REAR WING FLAP 2	1	000-12-000	R
14	AIRCRAFT REAR WING FLAP 3	1	000-12-004	R
15	AIRCRAFT REAR WING FLAP 4	1	000-12-005	R
16	AIRCRAFT WING ASSEMBLY	1		T
17	MAINPLANE TAB AIRCRAFT	2	000-12-015	R
18	JABROACH SUSPENSOR FRONT	1	000-12-04	
19	0.100" WING HTL ADJUSTING WASHER	2	070-12-00	
20	0.100" WING HTL ADJUSTING WASHER	2	070-12-01	
21	0.100" WING HTL ADJUSTING WASHER	5	070-12-02	
22	0.100" WING HTL ADJUSTING WASHER	6	070-12-03	
23	0.100" WING HTL ADJUSTING WASHER	6	070-12-04	
24	0.100" WING HTL ADJUSTING WASHER	6	070-12-05	

Part of: ENGINEERING LIAISON  
 CODE: ICE 11111  
 REAR WINGS (CON, T).

0001

Part of main assembly.

	Description	No.	Part Number
25	0.10" WING HT. ADJUSTING WASHER	0	070-12-05
26	0.21" WING HT. ADJUSTING WASHER	0	070-12-07
27	0.24" WING HT. ADJUSTING WASHER	0	070-12-08
28	NO. 3 ELEMENT GURNEY FLAP 1.50"	0	00P-12-52
29	NO. 3 ELEMENT GURNEY FLAP 1.25"	0	00P-12-53
30	NO. 3 ELEMENT GURNEY FLAP 1.00"	0	00P-12-54
31	NO. 3 ELEMENT GURNEY FLAP 0.75"	0	00P-12-55
32	NO. 3 ELEMENT GURNEY FLAP 0.50"	0	00P-12-56
33	NO. 3 ELEMENT G.U.F. CLAMP PLATE	0	00P-12-57
34	TOP FLIGHT FR. DUCT FRAME	2	000-12-02
35	FR. LWR MTC EXHAUST G/FRAME RH	2	000-12-07
36	FR. LWR MTC EXHAUST G/FRAME LH	1	000-12-08
37	REAR LWR MTC EXHAUST G/FRAME RH	1	000-12-09
38	REAR LWR MTC EXHAUST G/FRAME LH	1	000-12-10
39	FR. LWR MTC RH D/DUCT	1	000-12-11
40	FR. LWR MTC LH D/DUCT	1	000-12-12
41	REAR LWR MTC RH D/DUCT	1	000-12-13
42	REAR LWR MTC LH	1	000-12-14
43	FR. DUCT OF FR. LWR MTC	2	000-12-15
44	FR. DUCT OF REAR LWR MTC	2	000-12-16
45	R. DUCT OF FR. LWR MTC	1	000-12-18
46	REAR DUCT OF FR. FR. LWR MTC	1	000-12-17
47	FR. DUCT ACCESS PANEL	1	000-12-20
48	BEARINGS HSC ROCKER	10	070-12-19

Wing Attachment King Bolt  
 0000 ICE 5 L1 54  
 REAR WINGS (CON, T).

0004

Part of sub-assembly.

Part No.	Description	Qty.	Part Number
40	MAIN CHINA	1	000 10 00
50	WING STAY L/W INT. EXTER	2	000 10 09
51	WING STAY L/W INTERN	2	000 10 10
52	STAY L/W WING	2	000 10 11
53	STAY L/W WING	2	000 10 12
54	REAR STRAKE BUSH LH EX	1	000 10 13
55	REAR STRAKE BUSH RH EX	1	000 10 14
56	REAR STRAKE BUSH LH INT	1	000 10 15
57	REAR STRAKE BUSH RH INT	1	000 10 16
58	CLAMP PEE BODY	6	000 10 17
59	WASHER COUNTER 1/4 TURN	20	000 10 18
60	FLAP ASSEMBLY BOLT	2	000 12 107
61	FLAP ASSEMBLY SLIDING PINCT	2	000 12 108
62	10.5" FINELY FLAP REEF PLATE	2	000 12 000
63	INSERT RE FLAP ASS TO 1/2 FT	2	000 12 000
64	A FRAME L/W OPT LH	1	000 10 501
65	A FRAME L/W SUPPORT RH	1	000 10 502
66	FAIRLEAD END COVER TO L/W	1	000 10 503
67	CLIP 2 REEF NET WING	1	000 10 504
68	CLIP 2 REEF NET WING	1	000 10 505
69	WING WRM INTERPOLATED	1	000 10 506
70	WING WRM INTERPOLATED LH	1	000 10 507
71	WING PLATE	2	000 10 508
72	WING WRM	1	000 10 509

FIELD NO. 7E141 (1988) 1.1.14  
 CODE: K&L L&L L  
 REAR WING(CDN,T).

0001

Part of next assembly.

	Description	No.	Part Number
70	WINGMID ELEMENT	2	000-12-01
74	WINGMID GEN LH	1	000-12-01
75	RE WINGMID GEN RH	1	000-12-02
76	WINGFLAP HOLD FITTING	1	000-12-030
77	INSERT HOLD FITTING	1	000-12-034
78	INSERT HOLD FITTING	1	000-12-035
79	END PLATE LH FITTING	1	000-12-037
80	END PLATE RH FITTING	1	000-12-038
81	FLAP HOLD FITTING	1	000-12-039
82	FLAP GEN FITTING	2	000-12-040
83	SLIDING STRIP HOLD FITTING 1/2"	2	000-12-042
84	SLIDING STRIP	2	000-12-043
87	SLIDING STRIP	2	000-12-044
88	SLIDING STRIP	2	000-12-045
89	WINGMID STRIKE PIN	1	000-12-04
90	WINGMID ELEMENT	1	000-12-05
99	5" NACA DUCT	2	000-12-20
99	REAR WING PELLAR SHEET	1	000-12-202
91	W/W RETURN ANGLE PIN	1	000-12-71
92	W/W A FRAME ATT END	1	000-12-72
93	W/W RETURN ANGLE L IP	1	000-12-72
94	W/W A FRAME ATT END	1	000-12-74
95	W/W PELLAR HUB ADS	1	000-12-75
95	FLAP PIVOT PIN	1	000-12-75

- various - see table

751  
 3491

PLANE 01 - ENGINE EXHAUST SYSTEM - L&L  
 0000 - 1011 - 11111111  
 REAR WINDSCREEN, E.

0000

Part of main assembly.

Part Number	Description	Qty.	Part Number
00	ADJ. INTERNAL FLAP KNUCK PLATE	2	<del>000-12-000</del> del
00	INTERNAL EXT. FLAP ADJ. TO EXT. FT.	2	<del>000-12-001</del> del
00	OH LAMPED LENS	1	000-12-00
100	AWL FOOT LH	1	000-12-077
101	AWL FOOT	1	000-12-078
100	AWL FOOT EXT	1	000-12-079
100	OPERATING SWICH	1	100-12-00
101	TURBO AIRLET INLET	1	000-12-002
100	EXH. TO EXT. ADAPTER	1	000-12-00
100	EXHAUST FRONT WING	1	000-12-000
107	RR ENDPLATE LONG 10.5 FT. RH	1	000-12-000
100	RR ENDPLATE LONG 10.5 FT. LH	1	000-12-007
100	LHC EXT LONG 10.5 FT. RH	1	000-12-000
100	LHC EXT LONG 10.5 FT. LH	1	000-12-000
111	FW SPLITTER 10.5 FT. LH	1	000-12-001
110	FW SPLITTER	1	000-12-000
110	FLAP COVER	1	000-12-001
110	OH REAR WING	1	000-12-017
110	WING MTS AIRFOAT 2 RH	2	000-12-010
110	WING MTS AIRFOAT 2 LH	2	000-12-010
117	AIRFOAT 2 WING LH END PLATE	1	000-12-077
110	AIRFOAT 2 WING RH END PLATE	1	000-12-070
110	PERIOD STAKE	2	000-12-100
100	REFLECTOR LIGHT	2	000-12-101





Part 1 of 1 - Engineering Form 1 of 1  
 0000 10 0 10 000  
 WATER SYSTEM (CON, T)

0001 Part 1 of 1 work completed

Quantity	Description	U	Part 1	Value
00	WATER TREATMENT UNIT	0	000	10 00
01	WATER TREATMENT UNIT	2	000	10 00
02	WATER TREATMENT UNIT	0	000	10 00
03	WATER TREATMENT UNIT	0	000	10 00
04	WATER TREATMENT UNIT	0	000	10 00
05	WATER TREATMENT UNIT	1	000	10 00
06	WATER TREATMENT UNIT	1	000	10 00



Part of Oil System (Don, T)  
 OIL SYSTEM (DON, T)  
 OIL SYSTEM (DON, T)

9004

Part of Don Assembly

Quantity	Description	Unit	Part Number
02	DOWN HATE OIL TANK ACCESS	1	900-14-01
02	O RING 300 142 1470	1	90-10-0
07	DOWN PLUG	1	970-11-01
02	FINE END OIL TANK RETURN	1	900-14-11
02	O RING 300 147	2	90-1-0
04	OIL RET ADAP TUBES	1	900-14-05
01	OIL TUB OIL RET ADP	1	900-14-05
02	BOSS FLANGE OIL RET ADP	1	900-14-27
10	TUBE OIL RET ADP	1	900-14-20
04	TUBE OIL RET ADP	1	900-14-20
05	CATCH TANK IN RET ADP	1	900-14-05
02	ADP PLUG OIL IN TUBES	1	900-14-01
07	CATCH T IN RET ADP	1	900-14-22
02	CATCH T BR FIT	1	900-14-02

REVISIONS TO ENGINE INSTALLATION DRAWING  
 0000 1000 1000000  
 FUEL SYSTEM

0000

For Part of item quantity:

	Part Name	Qty	Part Number
1	FUEL TANK	1	000-15-01
2	FUEL PUMP	1	000-15-02
3	EXHAUST FLANGE FUEL	0	000-15-03
4	EXHAUST FLANGE ABE FUEL	0	000-15-04
5	FUEL VENT BLANKING PLATE PLUG	1	000-15-11
6	BLANKING PLATE	1	000-15-12
7	FUEL TANK SPACER	1	000-15-13
8	TANK TOP BACKET	1	070-15-05
9	FUEL PUMP CABLE END	1	000-15-10
10	FUEL PUMP CABLE FLANGE	1	000-15-11
11	CABLE FUEL PUMP	1	000-15-05
12	FUEL TANK TOP RR	1	000-15-06
13	VENT RECEPTOR	1	000-15-07
14	SEWER CENTRE BATT T/O	1	000-15-08
15	TOP FLOAT ARM	1	000-15-09
16	BYE FLOAT ARM	1	000-15-10
17	BATTLE BY	1	000-15-10
18	BATTLE BY	1	000-15-10
19	TOP FLOAT TUBE	1	000-15-14
20	FLOAT TUBE	1	000-15-15
21	FUEL SET BAND BOLT 0	1	000-15-22
22	FUEL SET BAND NUT 0	1	000-15-23
23	FUEL TANK VENT VALVE	1	000-15-25
24	FUEL TANK VENT LOCK NUT	1	000-15-26

FUEL SYSTEM (CON, T)  
 FUEL SYSTEM (CON, T)  
 FUEL SYSTEM (CON, T)

880A

Part of fuel assembly.

	Description	Qty	Part Number
35	FUEL TANK TOP OVAL	1	880 10 10
36	FUEL TANK POLYTH	1	17-1 11
37	GASKET TANK OVAL	1	17-1 11
38	O RING 300 300 4470	1	30 0 0
39	O RING 300 300 4470	1	30 0 0
40	O/RING 10 DOWTY OVAL	2	30 0 10
41	LOW FUEL LEVEL SENSOR UNIT	1	30 10 11
42	TANK TOP O RING	1	30 1 10
43	O RING 300 300 4470	1	30 0 10
44	O RING 300 300 4470	1	30 0 0
45	FUEL PUMP GANGE	2	300 10 17
46	FUEL PUMP GANGE GASKET	2	300 10 18
47	FUEL PUMP CON UNIT	2	300 10 19
48	BOM ASSEMBLY	2	30 0 1

ENGINE & TRANSMISSION  
 ENGINE & TRANSMISSION.

0001

Part of next assembly.

	Description	No.	Part Number	
1	FLANGE ALUM EXHAUST PUMP	0	000-10-01	8
2	WASH BOWL AND LAMP	2	000-10-02	
3	OIL CONTAINER ON ENGINE	0	000-10-03	
4	NUT HOLDING REAR TORQUE PLATE	4	700-10-05	
5	NUT HOLDING FRONT TORQUE PL	4	000-10-06	
6	ADP FOR TORQUE PLATE	2	000-10-07	
7	TURBO INLET ADAPTER	1	000-10-09	
8	TORQUE PLATE DETAIL UPPER	1	000-10-09	
9	TORQUE PLATE DETAIL LWR	1	000-10-10	
10	SHIM W/SHIM ON IN	1	000-10-11	
11	WASHER ON INLET PIPE	1	000-10-12	
12	SHIM FOR INLET PIPE	2	700-10-13	
13	TORQUE PLATE ADP	1	000-10-14	
14	FRONT TORQUE PLATE ADP	1	000-10-07	
15	MODIFIED TURBO HSG	1	000-10-25	
16	OUTLET ADP FOR VALVE	1	000-10-15	
17	WASHER FOR OIL PUMP	1	000-10-16	
18	O-RING FOR OIL PUMP	1	00-00-0	
19	O-RING FOR OIL PUMP	2	00-00-0	
20	OIL PUMP FOR TURBO	1	000-10-17	
21	O-RING FOR OIL PUMP	1	00-00-0	
22	WASHER FOR OIL PUMP	1	000-10-18	
23	TURBO INLET	1	000-10-09	
24	TURBO INLET	1	000-10-09	

ENGINE & TRANSMISSION (CON, T)  
 ENGINE & TRANSMISSION (CON, T)  
 ENGINE & TRANSMISSION (CON, T)

000A

Part Number: 15 Page Number: 2

Part Number	Description	Qty	Part Number
00	...	1	000 10 00
01	...	1	000 10 01
02	...	1	000 10 02
03	...	1	000 10 03
04	...	1	000 10 04
05	...	1	000 10 05
06	...	1	000 10 06
07	...	1	000 10 07
08	...	1	000 10 08
09	...	1	000 10 09
10	...	1	000 10 10
11	...	1	000 10 11
12	...	1	000 10 12
13	...	1	000 10 13
14	...	1	000 10 14
15	...	1	000 10 15
16	...	1	000 10 16
17	...	1	000 10 17
18	...	1	000 10 18
19	...	1	000 10 19
20	...	1	000 10 20
21	...	1	000 10 21
22	...	1	000 10 22
23	...	1	000 10 23
24	...	1	000 10 24
25	...	1	000 10 25
26	...	1	000 10 26
27	...	1	000 10 27
28	...	1	000 10 28
29	...	1	000 10 29
30	...	1	000 10 30

Part 17 - Miscellaneous  
Miscellaneous  
MISCELLANEOUS

QORA

Part 17 - Miscellaneous

Quantity	Description	Unit	Part Number
1	DEAL TANK FOR PARTIAL	0	QOR 17 01
2	MATERIAL DOWN CLIP	4	QOR 17 02







Part of the next assembly

CLUTCH

Q00A

Part of next assembly

Quantity	Description	Qty	Part Number
1	CLUTCH RELEASE ARM	1	000-25-01
1	SHOCK MOUNTING CLUTCH RELEASE ARM	1	000-25-02
1	CLUTCH RELEASE REL. ARM	1	000-25-03
1	FRONT COVER CLUTCH RELEASE ARM	1	000-25-04
1	SHOCK BUSH CL. REL. ARM	1	000-25-05
1	CLUTCH CABLE	1	000-25-06
1	CLUTCH CABLE GUIDE	1	000-25-07
1	SHOCK BUSH CL. REL.	1	000-25-08
1	SHOCK BUSH	1	000-25-09
10	SHOCK BUSH CL. REL. LEVER	1	000-25-10
11	SHOCK BUSH CL. REL. LEVER	1	000-25-11
12	CLUTCH CABLE CLAMP	1	000-25-12
13	CLUTCH RELEASE ARM	1	000-25-13
14	CLUTCH REL. FOR OP. COVER	1	0-00-0
15	CLUTCH RELEASE ARM NIK1	1	000-25-14
16	SHOCK BUSH CL/REL. NIK1	1	000-25-15
17	SHOCK BUSH CL/REL. ARM NIK1	1	000-25-16

BRAKE & HYDRAULIC  
 BRAKE & HYDRAULIC  
 BRAKE & HYDRAULIC

000A

Part of unit as only

	Description	No.	Part Number
1	BOLTER BOLT	1	000-05-01
2	BANJO BOLT	1	000-05-02
3	BRAKE DISC-SIDE BELL BUSH	40	000-05-03
4	BRAKE DISC-SIDE BELL BOLT	40	000-05-04
5	BRAKE DISC BELL	1	000-05-05
6	BUSH-SIDE DISC BELL WASHER	40	000-05-06
7	IN PUSOCH BRAKE DISC	2	000-05-01
8	IN PUSOCH BRAKE DISC	2	000-05-02
9	CALIPER ROD (M12) 1/2"	2	000-05-101
10	CALIPER ROD (M12) 1/2"	2	000-05-102
11	WASHER CYL ROD 1/2-001	2	000-05-100
12	N/O RECEIVER ADPT	2	000-05-01
13	NO K-NUT (HI-TEMP) 1/2-000	40	13-0-14
14	WASHER CYLINDER DIAPHRAGM	2	7-7-12
15	BREMED DISC 1.1"	4	000-20-03
16	BREMED DISC 1.10	4	000-20-02
17	CARBON DISC	4	000-20-05
18	BRAKE DISC BOLT CARBON	40	000-20-04
19	BRAKE DISC GLEIVE CARBON	40	000-20-07
20	BREMED DISC 1.1"	4	000-20-03
21	BREMED DISC 1.10	4	000-20-02

REPAIR PARTS LIST FOR THE  
 ENGINE ROOM OF THE  
 ELECTRIC

0004

See Part 1 of this assembly.

	Part Name	No.	Part Number
1	MTC TRAY LH ACC	1	000-00-01
2	MTC TRAY RH ACC	1	000-00-02
3	BACK PANEL	1	000-07-07
4	SPACER BACK PANEL	1	000-00-03
5	MTC HANDLE	2	000-00-04
6	MTC HANDLE	2	000-00-02
7	CONNECTOR MTC	1	000-00-04
8	CONNECTOR MTC	1	000-00-05
9	OWNER PUDGE ECW/IDA	8	000-00-07
10	OWNER MTC	1	000-00-08
11	TOP MTC	1	000-00-10
12	4 X MTC 1 BUSH MTC	1	000-00-12
13	ANN MACH DATA	1	000-00-13
14	ECU OAHLOCK STRP	1	000-00-15
15	OHM 00 STRAP DATA ACC	1	000-00-15
16	TOP STRAP ECU	1	000-00-17
17	TOP STRAP DATA ACC	1	000-00-18
18	SIDE STRAP DATA ACC	1	000-00-20
19	SIDE STRAP ECU	1	000-00-21
20	ADAPT PUDGE OWNER	1	000-00-24
21	ELIC TRAY	1	000-00-25
22	VAL ROD TOP PLATE	1	000-00-26
23	VAL ROD MTC PLATE	1	000-00-27
24	VAL ROD SMALL	1	000-00-28

THE UNIVERSITY OF TEXAS AT AUSTIN  
 ELECTRONIC JOURNAL  
 ELECTRONIC JOURNAL, TX

000A - Part of unit assembly.

	Description	Qty.	Part Number
26	SOFT SUFT SUFT TRAY	1	200-28-29
27	SOFT SUFT TRAY	1	200-28-30
28	SOFT TRAY LH	1	200-28-31
29	SOFT TRAY RH	1	200-28-32
30	FIRE POWER PACK	1	29-1-5
31	FIRE HOSE	1	020-01-127
32	FIRE NOZZLE LOCK NUT	1	020-01-120
33	GUESS FIRE EXTINGUISHER	1	29-1-10

GENERAL JOINTS  
 GENERAL JOINTS  
 GENERAL JOINTS

0000  
 (1) (2) (3) (4) (5) (6) (7) (8) (9) (10) (11) (12)

	Description	Qty	Unit Price
1	ROTOR PUNCH ROD AND JOINT	2	900-05-01
2	11 DWS 07	12	900-07-02
3	11 DWS 08	4	900-08-03
4	11 DWS 10	2	900-08-04
5	22 AMR 05 U1	2	900-09-05
6	22 2526 P	2	900-09-06
7	22 AMR 07 U2	2	900-09-07
8	22 AMR 08 U2	2	900-09-08
9	22 AMR 09 U4	2	900-09-09
10	11 DWS 07	2	900-09-10
11	22 AMR 09 UR OR ARMTL 0000	2	900-09-11
12	11 0000 000	4	900-09-12
13	11 00 00	2	900-09-13
14	ARMTL 10 00	2	900-09-14
15	AMR 0 0000 JOINTS	2	15-0-15
16	THE END W/ (N) 0000/AMRE	2	15-0-16
17	11 00 00 / AMR 00	4	900-09-17
18	00 00 W	4	900-09-18
19	ARMTL7 000	2	900-09-19
20	AMR 00 UR T.P. TUBE	1	900-09-20
21	NR 00 UR T.P. TUBE	1	900-09-21
22	ARMT 0 000 000	2	900-09-22

ALTERNATIVE CHARGED PARTS.

0000 - Part - Part quantity

	Part Name	Qty	Part Number
1	FRONT UPPER CV BS	2	300 02 37
2	FRONT SW LH	1	300 02 39
3	FRONT SW RH	1	300 02 40
4	FRONT SW CV LH	1	300 02 42
5	FRONT BS LH	1	300 02 101
6	FRONT BS RH	1	300 02 102
7	SW	1	300 02 103